
Prestige Steel Glass and Silicone installation instructions

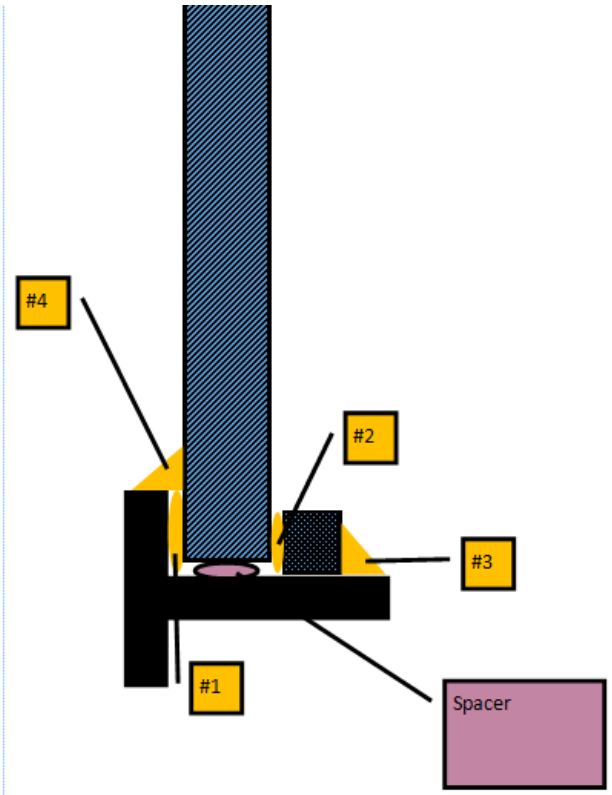

Steps:

1) Dry fit glass and stops.
2) Apply 1/4” bead of silicone (LABEL #1) to the outboard glass side of the fixed stop.
3) Add spacers as needed and fit glass to opening. Press glass against silicone to ensure even and complete seal.
4) Apply 1/4” bead of silicone (LABEL #2) to inboard glass side where the removable stop will go.
5) Add frame/removable stop. Press frame against glass to ensure even and complete seal.
6) Wait OVERNIGHT for silicone to dry and set.
7) OPTIONAL STEP - Add 1/8” silicone (LABEL #3) to inside edge of frame as a cap glaze. Using a finger or tool, finish edge of silicone. Cap glazing bead should be clean and uniform. No silicone should be on top of frame or on stiles or rails of doors.
8) Add 1/8” of silicone (LABEL #4) to outboard edge of glass as a cap glaze. Using a finger or tool, finish edge of silicone. Cap glazing bead should be clean and uniform. No silicone should be on top of frame or on stiles or rails of doors.